

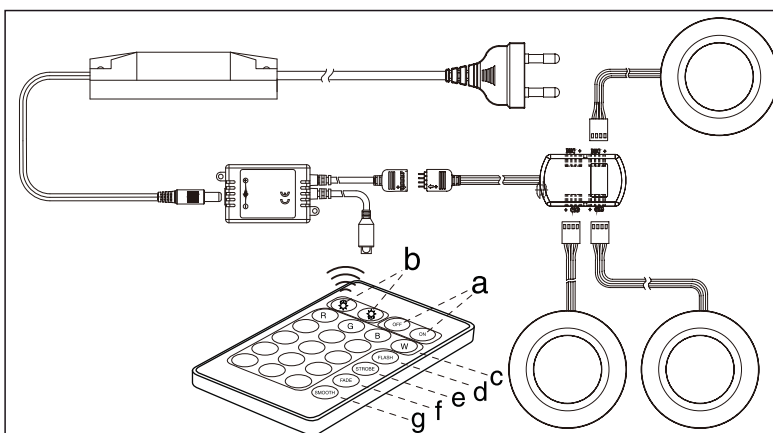
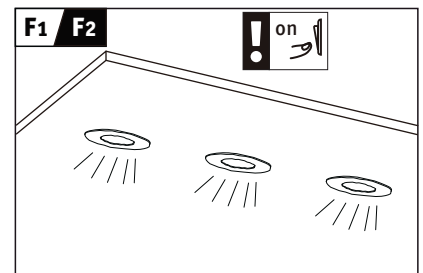
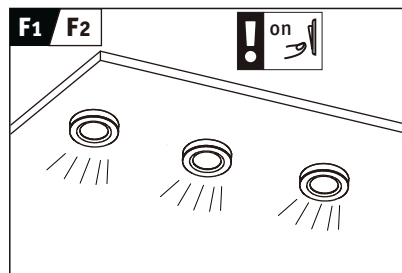
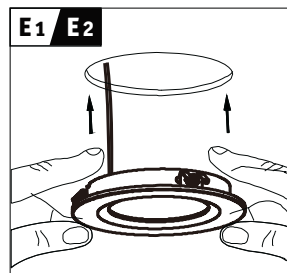
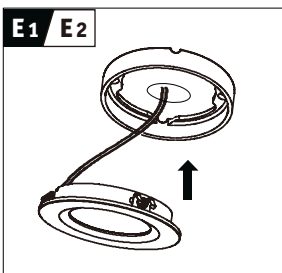
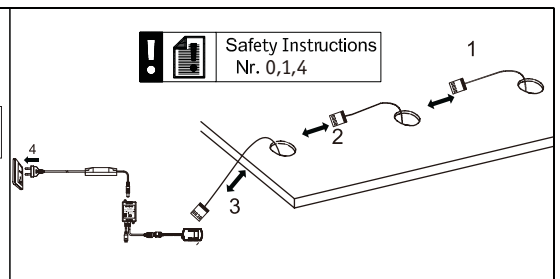
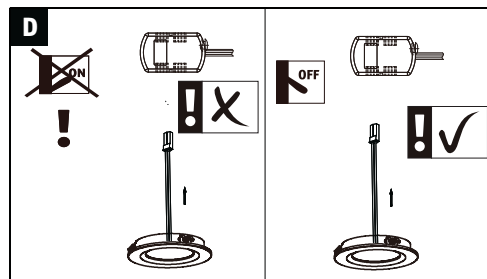
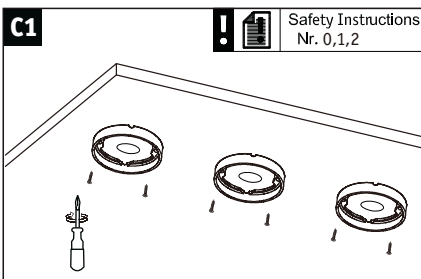
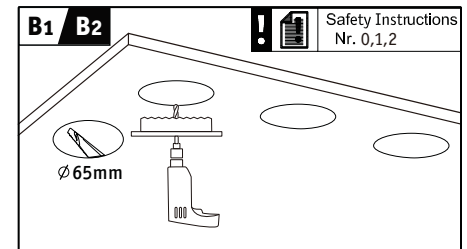
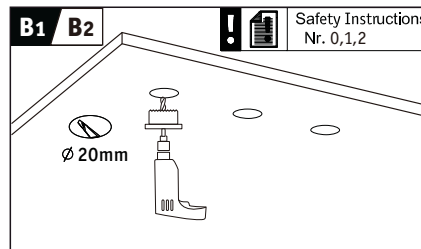
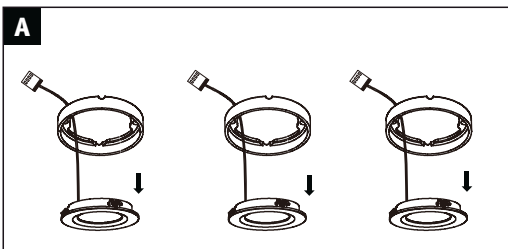
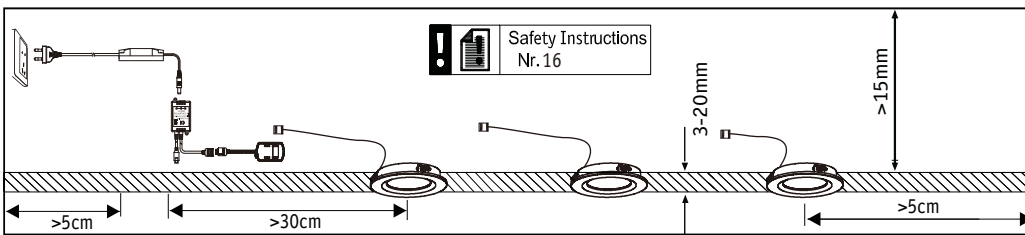


Art.-Nr.: 935.68

(+MA 173) PMK05/15

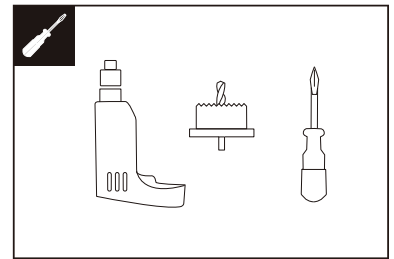

- a** On / Off switch
- b** Bright key.
- c** R,G,B,W : Choose color. Red, Green, Blue, White.
- d** Flash key : 7 colors flash change.
- e** Strobe key : Strobe color effect.
- f** Fade key : Gradual change of 16 colors (loop).
- g** Smooth key: Slow alternate color change (7 colors).

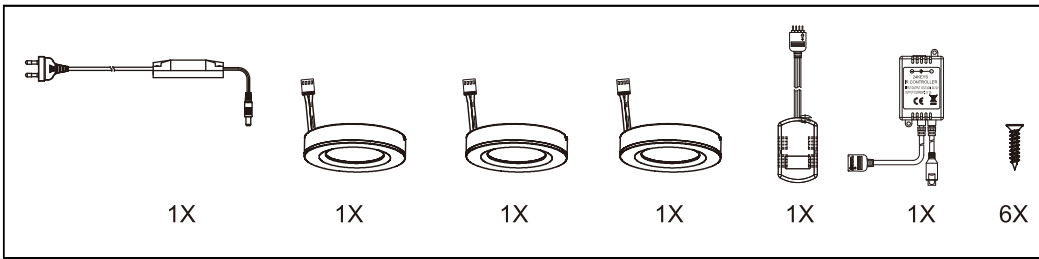